

# Instructions

## Front Control Arm Bushings - Offset Caster Increase

**N.B:** This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

**Important - confirm caster readings prior to installing new bushings.**

**Application** - Honda Accord - incl Euro  
- 2008-2012

*Always refer complete catalogue listing*

**Contents** - Bushing 82023 x2

- Raise vehicle evenly and safely support.

*Never rely on a Jack only*

- Proceed to remove front wheels.
- Un-bolt and completely remove control arms from vehicle.


**Note - check condition of lower shock bushing - this may need replacing.**

- Using a Press, press out original front bushing including the steel outer shell.

Refer image below for caster increase or decrease.

- Press in new bushings and re-fit arm to vehicle.

**Important - a wheel alignment will be required immediately after install.**

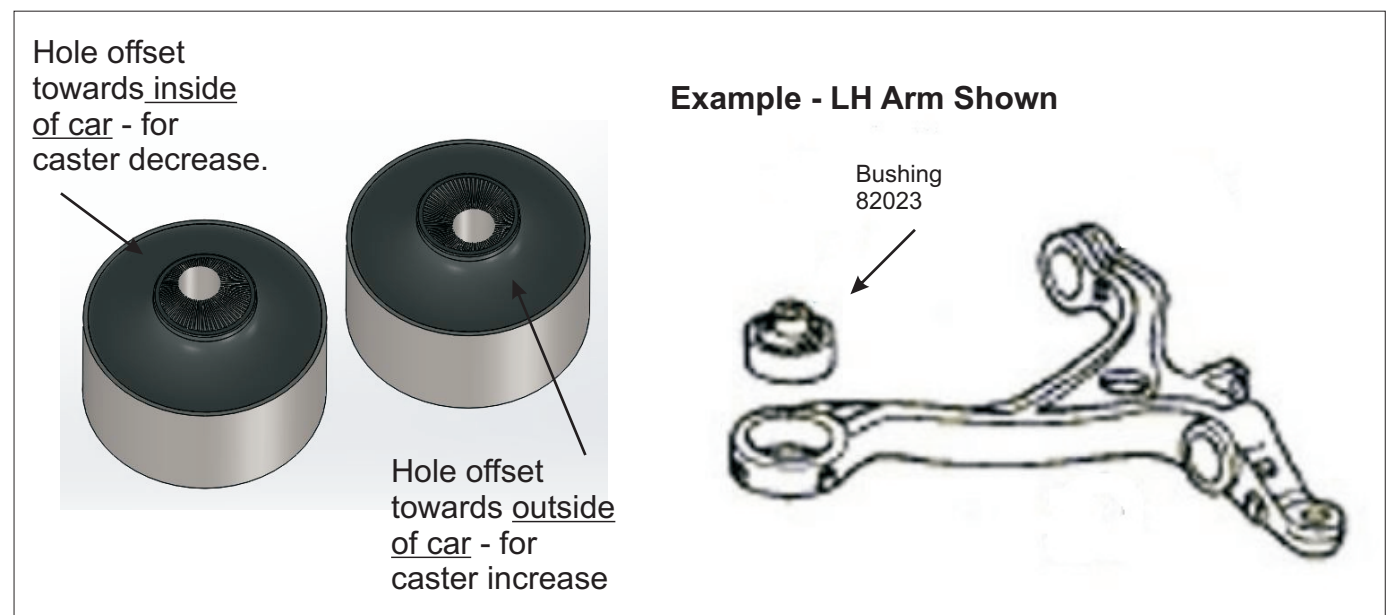

**N.B:** It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.