


roll control

Fitting instructions for **RC0017R-30/RC0054R-30** VDJ70 series Landcruiser Rear Swaybar.

This work should only be carried out by qualified persons

1. Raise vehicle and support Diff on Jack stands. Swaybar is to be fitted at ride height.
2. If the Diff does **Not** have Sway bar mounting brackets Fit the sway bar to the differential using the U/Bolts, Bushings and Brackets supplied. Note: There is a left and right bracket. The right hand bracket has offset shoulders

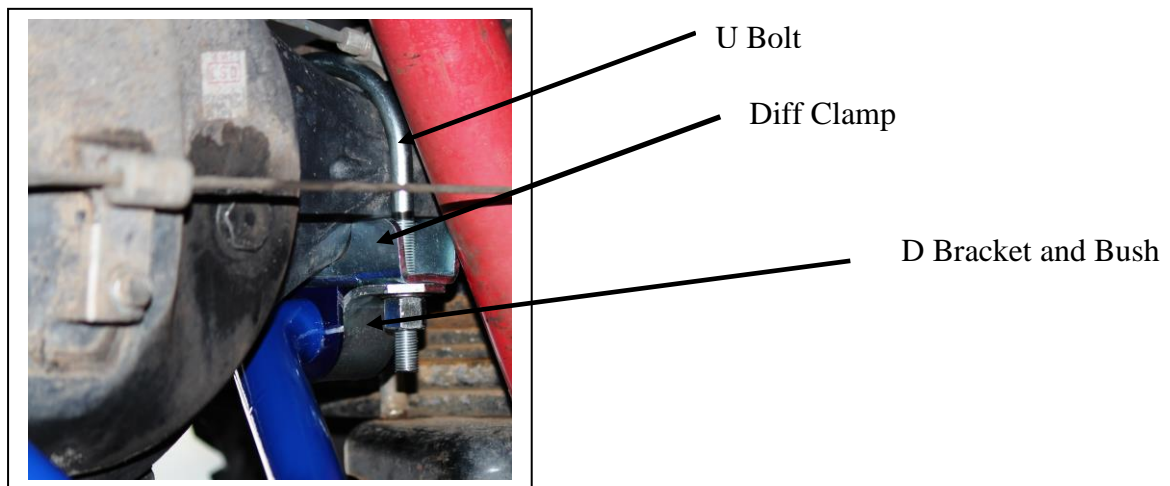

3. If the Diff has Factory brackets fit the bar with the D/Brackets and Bushes supplied.
Discard the U/bolts and Diff clamps

4. Fit the left and right Chassis brackets to the Chassis with bolts supplied.
5. Fit the link pins to the Brackets with the SPF 2755 bushes and cup washers supplied.
6. Swing the Sway bar up to the links and bolt together.
7. Check that all bolts are tight and lower the Vehicle off the Stands

Please drive carefully to get used to the new handling characteristics.

Super Pro Roll Control does not take responsibility for incorrect fitment or misuse of this product.

Pictures are indicative and are not necessarily exact to the B.O.M

